



## A-CLR-ANCR-4 – Collar – Hose Support – Split Clamp

### Description

The support collar is designed to fit around the split clamp that connects a male and female hose coupling. One of its ear shackles attaches to an anchor while the other attaches to a float. The collars are used to support a hose assembly running from sea to shore.

#### Date

2025/04/05

#### Date Created

2024/03/22

#### Meta Fields

**Tax Status :** none

**Manage Stock :** no **Stock Status :** instock

**Sku :** A-CLR-ANCR-4