



A-CLR-ANCR-6 – Collar – Hose Support – Split Clamp

Description

The support collar is designed to fit around the split clamp that connects a male and female hose coupling. One of its ear shackles attaches to an anchor while the other attaches to a float. The collars are used to support a hose assembly running from sea to shore.

Date

2025/05/29

Date Created

2024/03/22

Meta Fields

Tax Status : none

Manage Stock : no **Stock Status :** instock

Sku : A-CLR-ANCR-6